

HAWK ENTERPRISES OF ELKHART, INC



20 Gallon Wet / Dry Vacuums

Operation • Care • Service



Hawk Enterprises
52744 Park Six Court
Elkhart, IN 46514

Phone: 574-294-1910
Toll Free: 888-289-4295

Fax: 574-970-0289
Toll Free 866-429-5329



ASSEMBLED IN USA

Commercial Use Only

TABLE OF CONTENTS

Machine Specifications	1
Service Information	2
Important Safety Instructions.....	2
Grounding Instructions	3
Operations / Accessories	3
Brush And Drive Block Installation.....	4
Adjustments.....	4
Controls.....	5
Guidlines For Operation	5
Cord Storage	5
Clean Up And Storage	5
Floor Machine Assemblies.....	6
Floor Machine Parts List.....	7-8
Optional Accessories.....	9
Features	9
Limited Warranty	Back Cover

Machine Specifications

Model Number	20 Gallon Wet / Dry Vacuum
Part Number	V006-20
Motor	One 2 Stage, Bypass, 5.7" Dia., 115 Volt, 11.0 amp
Motor CFM	110
Motor Sealed	107.1 Inches
Power Cord	14-3 X 50 ft. SJT
Tank	Roto Molded Poly
Tank Color	Mock Rock
Tank Capacity	20.0 Gallons
Recoverable Capacity	15.9 Gallons
Tank Drain	1.5 Inches Diameter X 30 Inches
Push Handle	Yes
Wheels - Front	Two 4 in. Casters, Gray non-marking
Wheels - Rear	Two 10 in. dia - fixed Gray non-marking
Dimensions:	
Length	25 Inches
Width	20 Inches
Head Height	32 Inches
Handle Height	34 Inches
Weight	48 lbs
Tool Kit	Standard
Tool Basket	Standard
Front Mount Squeegee	30 Inches - Optional

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE



WARNING

To reduce the risk of fire, electric shock, or injury:

- **Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.**
- **To avoid electric shock, use indoors only.**
- **Do not allow to be used as a toy. Close attention is necessary when used by or near children.**
- **Use only as described in this manual. Use only manufacture's recommended attachments.**
- **Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outside, or dropped into water, return it to a service center.**
- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.**
- **Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.**
- **Do not handle plug or appliance with wet hands.**
- **Do not put any object into opening. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.**
- **Keep hair, loose clothing, fingers and all other body parts, away from opening and moving parts.**
- **Do not pick anything up that is burning or smoking, such as cigarettes, matches or hot ash.**
- **Do not use with filter(s) in place.**
- **Turn off all controls before unplugging.**
- **Use extra care on stairs.**
- **Do not pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.**
- **For a grounded appliance, "Connect to a properly grounded outlet only. See grounding instructions."**

SERVICE INFORMATION

To obtain consistent performance over the life of your equipment, read through these instructions and save them for future reference. If you require service, contact the dealer from which the machine was purchased or an authorized service station. Always refer to your Limited Warranty for complete service information.

SERIAL NO.		MODEL
VOLTS	PHASE	HZ
MOTOR	AMPS	H.P.

The model, type, and serial number are indicated on the data plate on the side of the handle. For prompt and complete service, refer to these numbers when inquiring about service.

Write the model and serial number of your unit in the space provided. Refer to the data plate on unit.	
SERIAL #	MODEL #
Retain this owners manual for future reference.	

General Information

BEFORE YOU PLUG IN YOU TANK VACUUM, check the voltage on the data plate located on the vacuum near the power switch, to make sure it agrees within 10% of the voltage available (see data plate). Connect only to a grounded (3 wire) electrical outlet. **DO NOT OIL.** The motor in your vacuum is permanently lubricated and sealed. Do no oil any part of the motor at anytime.

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord that has an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING

Improper connection of an equipment grounding conductor can result in risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance.

If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120 volt circuit and has a grounding plug that looks like the plug illustrated in Figure 1. A temporary adapter which looks like the adapter illustrated in Figure 2 may be used to connect this plug to a two pole receptacle, as shown, if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (Figure 1) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by metal screw.

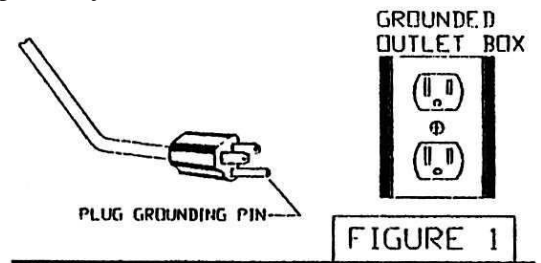


FIGURE 1

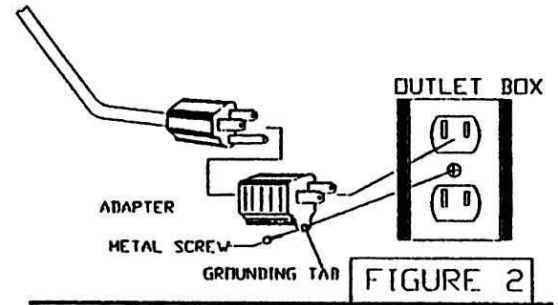


FIGURE 2

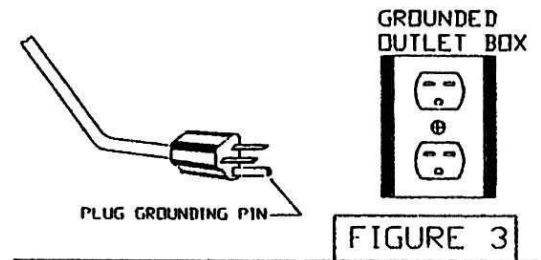


FIGURE 3

If this appliance is for use on a nominal 240 volt circuit, it has a grounded plug that looks like the plug illustrated in Figure 3. No adapter should be used with this type of plug.

Make sure that the appliance is connected to an outlet having the same configuration as the plug

How To Use Your Vacuum

TO CONNECT HOSE TO TANK

Grasp hose cuff and push with a twisting action until the cuff is securely attached to the barbed inlet tank fitting. Should great difficulty occur, place the cuff in hot water briefly to soften and thereby will slide in easier.

ON / OFF SWITCH

The ON / OFF switch is conveniently located on the back of the motor cover. Flip toggle switch up to turn "ON" or down to turn "OFF"

CORD STORAGE

When not in use, loosely wind power cord around the push handle and secure with clip molded into plug.

FILTERING SYSTEM

Your vacuum contains a highly effective filtering system. One system is designed for both wet and dry use and the second system is for dry use only. The removable dry filter assembly consists of a cloth bag sewed to a plastic ring located on the bottom of the motor cover assembly. The permanently installed wet filter assembly consists of a black synthetic mesh covering the wet shut-off system located underneath the motor cover assembly. The wet filter should never be removed and should remain in place for wet and dry pickup.

DRY USE

The dry filter assembly must be installed before picking up dry material. **NEVER** operate this vacuum for dry use, without the dry filter assembly in place. Damage to the motor will occur.

WET USE

Your vacuum is equipped with a permanently installed wet shut-off system that operates automatically when the tank becomes full of liquid, foam, or suds. The system consists of a metal frame and a float. When the level of the liquid or suds, rise in the tank, the float moves upward until it reaches the seal ring and shuts off all suction. You will know when the wet shut-off is engaged because you will be unable to pick up anything with the vacuum and the sound of the motor will change.

When the shut-off becomes engaged, you should immediately turn off the vacuum, disconnect power cord

from the electrical outlet and empty the tank. The vacuum will not operate again until the tank has been emptied.

After the tank has been emptied, the wet shut-off will automatically disengage and the vacuum will be ready for normal use.

NOTE: The wet shut-off assembly is permanently installed and should NEVER be removed.

When using the vacuum for wet pick-up, the dry filter bag must first be removed. Using the vacuum for wet pick-up with the dry filter assembly in place will ruin the filter.

FILTER BAG AND RECOVERY TANK MAINTENANCE

The filters in your vacuum are vital to its efficient, safe operation. They provide a high rate of air flow while trapping dirt particles and / or suds. If suds or dirt residue are allowed to build up on these filters, the air flow of your vacuum will be reduced. To maintain a high level of efficiency, it is essential that the filters be cleaned frequently.

NOTE: DISCONNECT THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE CLEANING THE FILTER ASSEMBLIES OR RECOVERY TANK.

TO EMPTY THE RECOVERY TANK

Your vacuum comes with a dump hose assembly located on the back of the recovery tank. The dump hose has a twist off cap to open and close for easy draining.

To dump the solution in the recovery tank, move the machine to a floor drain or some other suitable facility. Remove the cap and dump solution, lowering the hose slowly to minimize flooding. Replace cap and hose in storage position on vacuum after draining.

CLEANING THE DRY FILTER ASSEMBLY

To clean the dry filter assembly, remove the motor cover assembly by lifting it straight up and off. Remove the dry filter assembly by lifting it straight up being careful not to dislodge debris on the filter. The flannel bag filter assembly may be cleaned by shaking it vigorously or by gently brushing it clean.

NOTE: DO NOT WASH THIS FILTER

CLEANING THE WET FILTER ASSEMBLY


NOTE: DISCONNECT POWER CORD FROM ELECTRICAL OUTLET WHEN PERFORMING THIS TASK.

The wet shut-off system is located underneath the motor cover assembly and is covered by a black synthetic mesh filter which is designed to prevent large debris from reaching the float assembly.


The mesh filter is attached and should not be removed. The filter should be gently brushed or wiped clean occasionally. Always avoid getting moisture into the motor area, either inside or outside the motor cover area.

TO CLEAN RECOVERY TANK








Remove all dirt from the recovery tank after each use. The tank may be flushed with cold or warm water and / or wiped clean with a damp cloth. Be sure to thoroughly dry the recovery tank after cleaning. This helps prevent corrosion or mildew build-up. Vacuum should be stored in a clean, dry place when not in use.


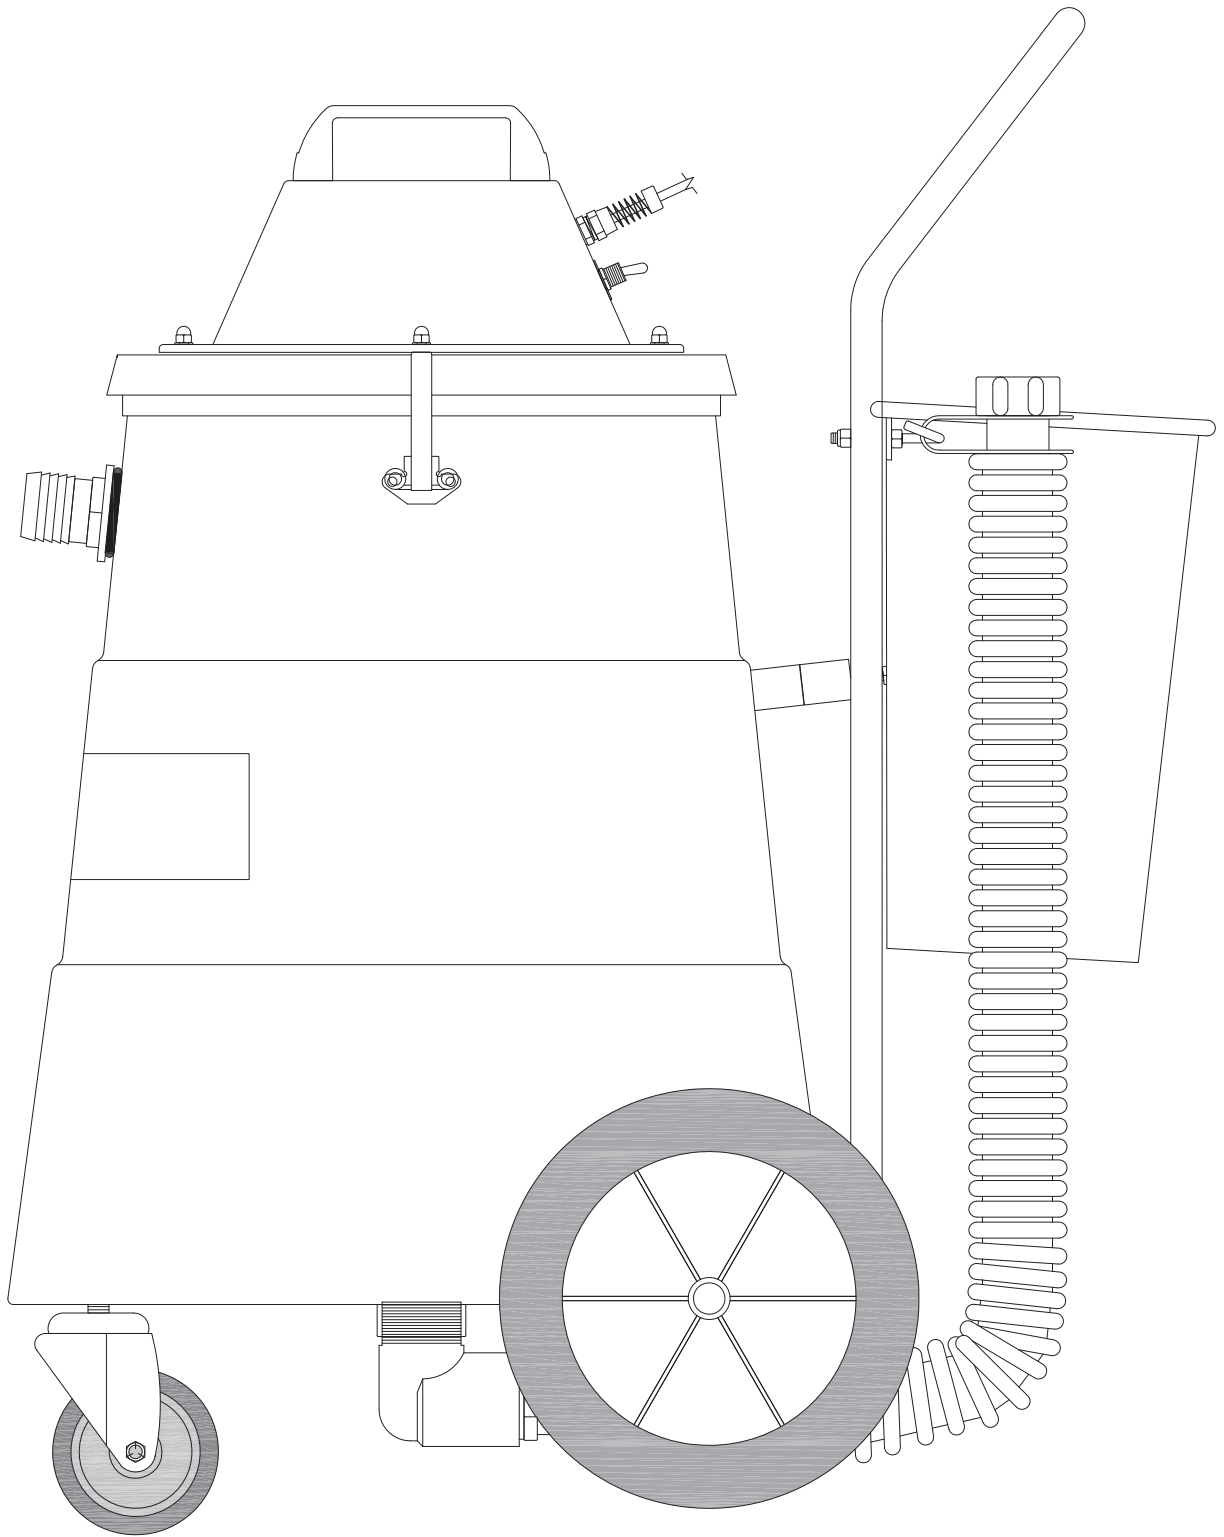


INSTALLATION OF POWER CORD

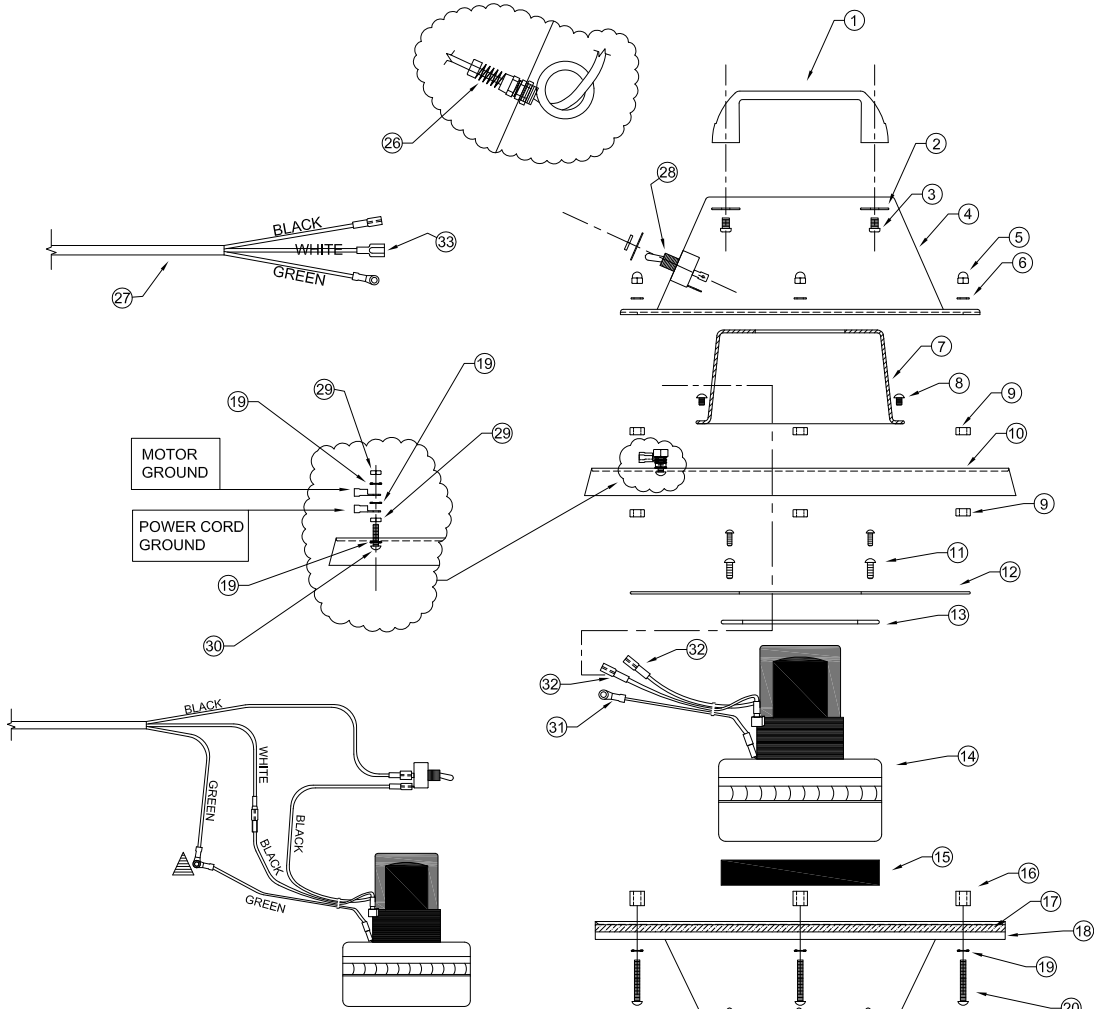



DETAIL NO:	PART NUMBER	DESCRIPTION	QTY.
	HP0012-1KIT	MOTOR COVER / HANDLE ASSY	1
1	INCLIN HPO012-1KIT	HANDLE LIFT W/BRASS INSERT	1
2	INCLIN HPO012-1KIT	WASHER .270IDX1.25ODX.080 THIC	2
3	INCLIN HPO012-1KIT	BOLT THIN HEAD 1/4-20X3/8	2
4	INCLIN HPO012-1KIT	COVER -- MOTOR HAWK 16/20 WDV	1
5	H0089	NUT ACORN STAINLESS STL 10-24	6
6	H0074SS	WASHER # 10 - STAINLESS	6
	HP0012-3KIT	COVER AIR SEPARATOR WDV	1
7	INCLIN HPO012-3KIT	COVER -- AIR SEPARATOR WDV	1
8	INCLIN HPO012-3KIT	SCREW RL FORM PH HDMS10-24X1/4	2
9	TV1070-1	SPACER -- 20 GALLON W/D - 1/4	12
10	S0043P	TOP COVER W/D VAC	1
11	H0059-4	SCREW PLASTITE 10-16 X 5/8	4
12	S0045P	TOP MTR MTG PLATE - BLK WRINK	1
13	TV1030	TOP MOTOR GASKET -- 4 X 5 X .12 RING	1
	HP0012-5KIT	MOTOR ASSY. W/GASKETS	1
14	HP0012-5KIT	MOTOR - HAWK 16/20 WDV 115V	1
15	HP0012-5KIT	LOWER MOTOR GASKET	1
16	HP0012-5KIT	SPACER -- 20 GALLON W/D	6
31	HP0012-5KIT	#10 RING TERMINAL	1
32	HP0012-5KIT	TERM. .250SPADE FLY INSL-FEMAL	3
	HP0012-4KIT	LOWER MTG. PLATE ASSY.	1
17	HP0012-4KIT	GASKET SUPPRT CVR F/V006-20 45 INCHES	1
18	HP0012-4KIT	LOWER MOTOR MOUNT PLATE	1
19	HP0012-4KIT	WASHER # 10 EXT. TOOTH LCK	9
20	HP0012-4KIT	SCW M/S PHL PAN SS 10-24X1-1/2	6
21	HP0012-4KIT	SCREW 10 - 24 X .50	3
22	TV1011	FLOAT SCREEN - 6 INCH	1
23	TV1000	FLOAT - 3 INCH HAWK - WD 1620	1
24	VA4081	FOAM FILTER	1
25	TV1020	FLOAT CAGE- HAWK 1620	1
26	H0021-2	STRN RLF BLK NY 6/6 ST W/FLXN	1
27	E0031-4	CORD BLACK 16-3 ST - 50' 6 IN	1
28	E0006	TOGGLE SWITCH (2-SPD)	1
29	H0097	NUT- ZINC 10 -24	2
30	H0002	SCREW 10 - 24 X 1.0 INCH TRD ROLL SCR	1
33	SM50759-2	.250 SPD TRMNL FULY INS - MALE	1
34	HP0012-2KIT	COMPLETE HARDWARE KIT TANK VAC HEAD ASSY.	1

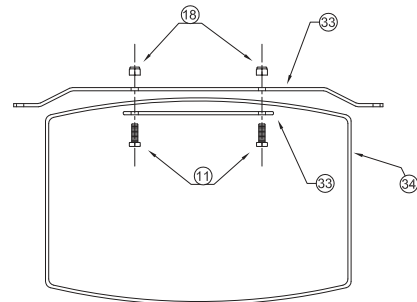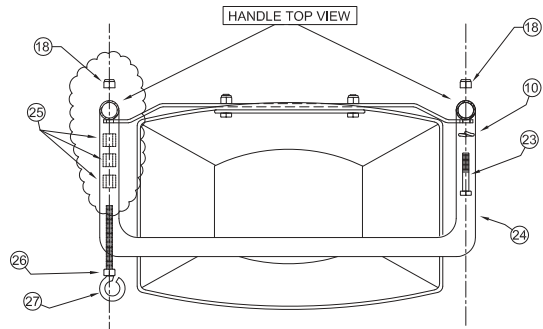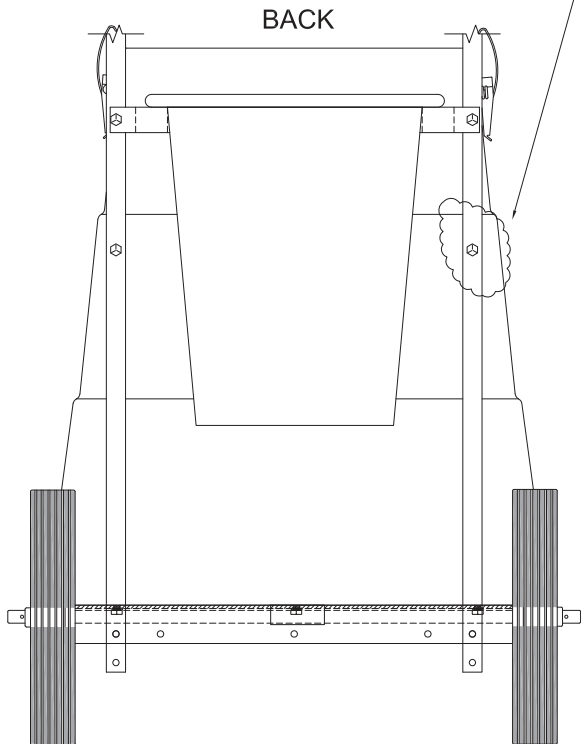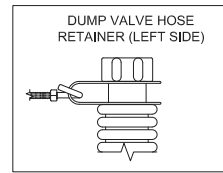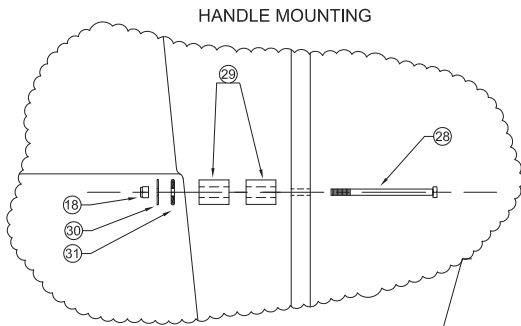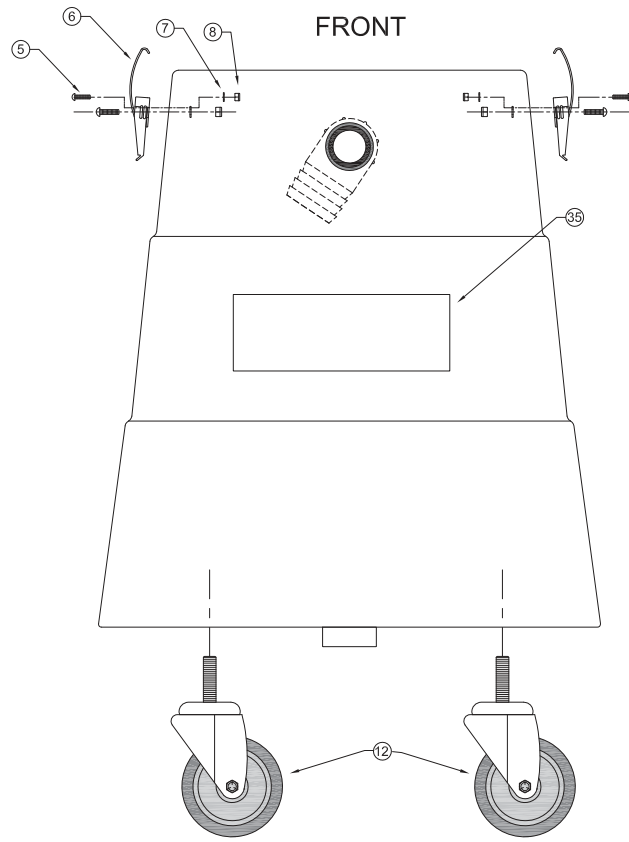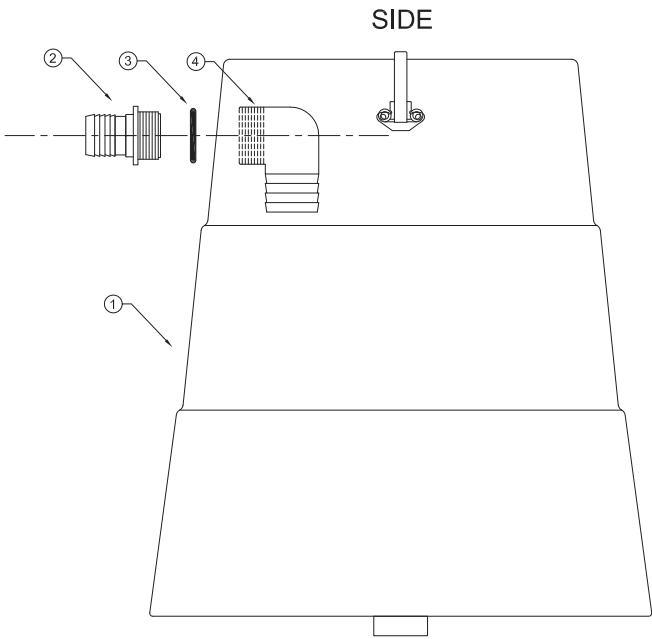

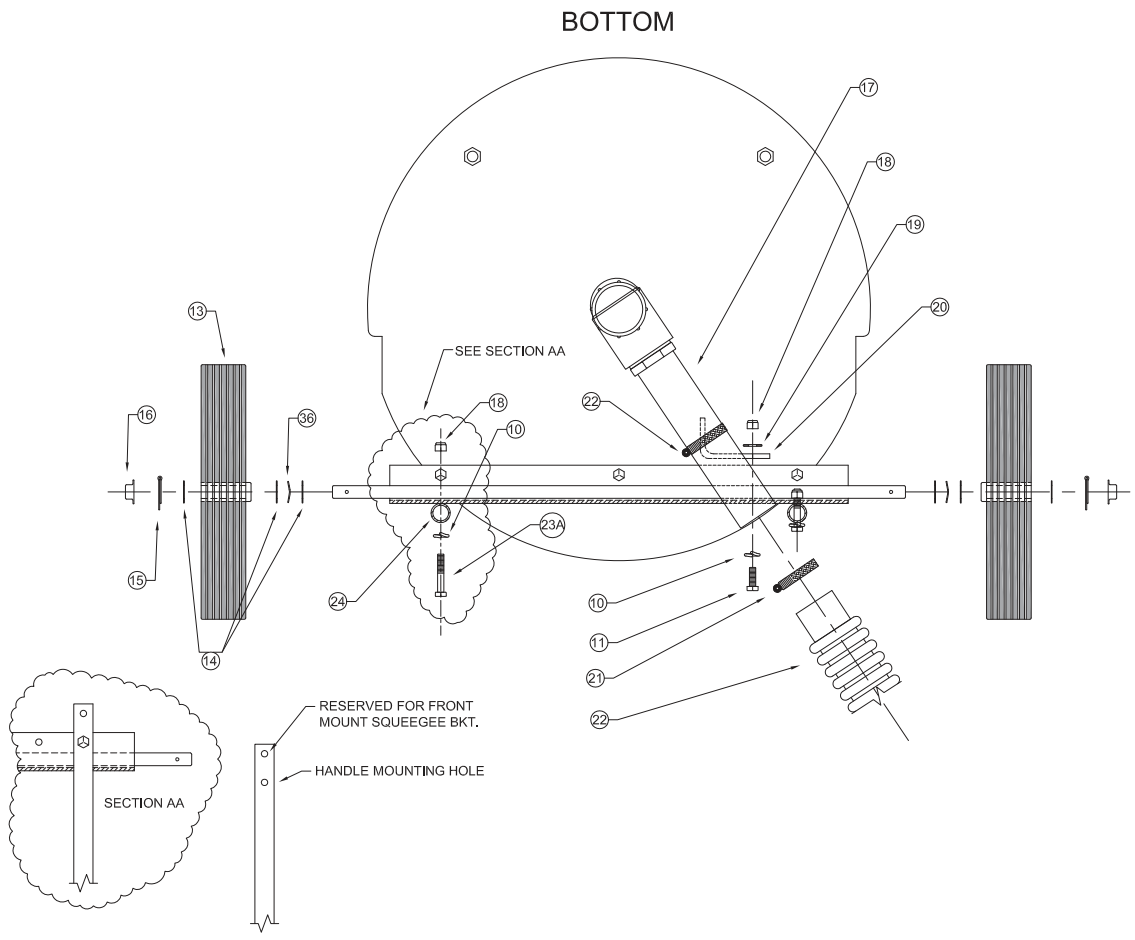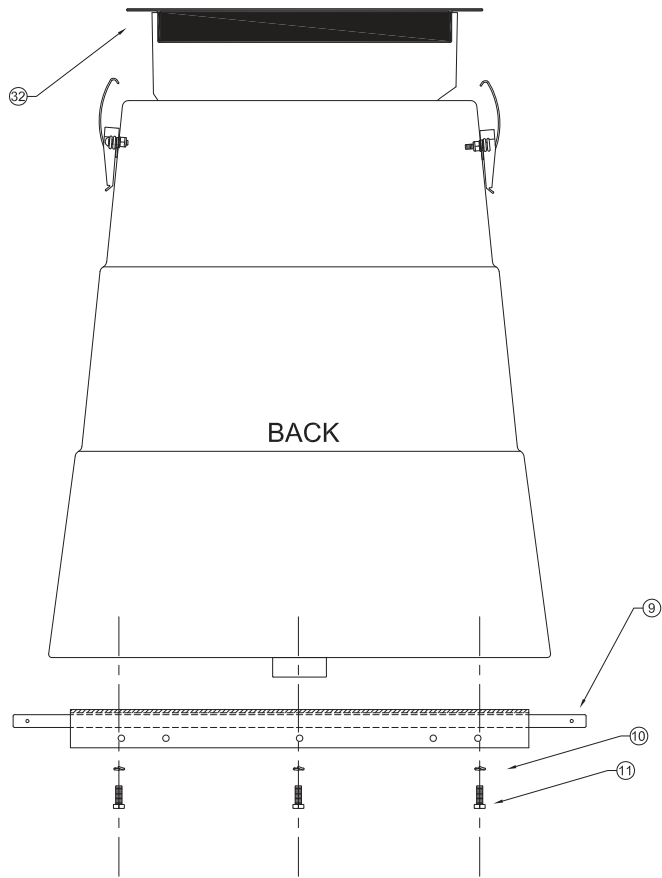

DETAIL	PART		
NO:	NUMBER	DESCRIPTION	QTY.
1	C0040M	TANK GRANITE	1
	HP0012-8KIT	INLET & DEFLECTOR KIT TANK VAC	1
2	INC. IN HP0012-8KIT	BARBED FITTING- INLET	1
3	INC. IN HP0012-8KIT	"O" RING INLET SEAL	1
4	INC. IN HP0012-8KIT	ELBOW INLET DEFLECTOR	1
	HP0012-7KIT	TOGGLE CLAMP KIT TANK VAC	1
5	INC. IN HP0012-7KIT	SCREW 10-24 X 1 SS	4
6	INC. IN HP0012-7KIT	CLAMP TOGGLE 20 GAL WD	2
7	INC. IN HP0012-7KIT	WASHER #10 STAINLESS	4
8	INC. IN HP0012-7KIT	NUT 10-24 NYLOC SS	4
	HP0012-9KIT	REAR AXLE & MOUNTING HARDWARE KIT TANK VAC	1
9	INC. IN HP0012-9KIT	REAR AXLE / HANDLE MOUNT WDMT. ZN	1
10	INC. IN HP0012-9KIT	1/4 MEDIUM SPLIT LOCK WASHER SS	3
11	INC. IN HP0012-9KIT	SCREW - STAINLESS STEEL - 1/4 - 20 X 3/4 HEX CAP	3
12	C0004-WD1620	CASTER SWIVEL 1/2-13 X 3/4 X 4 INCH	2
	HP0012-12KIT	WHEEL KIT TANK VAC	2
13	INC. IN HP0012-12KIT	WHEEL 1.75 X 10.0 INCH GRAY	1
14	INC. IN HP0012-12KIT	WASHER .875 X .510 X .030 ZN	3
15	INC. IN HP0012-12KIT	COTTER PIN 3/32 X 1 ZN	1
16	INC. IN HP0012-12KIT	PUSH NUT 1/2 INCH NU	1
36	INC. IN HP0012-12KIT	WAVE WASHER	1
17	C0065	DUMP VALVE PVC ASSEMBLY	1
11	SM50062	SCREW - STAINLESS STEEL - 1/4 - 20 X 3/4 HEX CAP	1
18	H0079-1SS	NUT 1/4-20 NYLOCK SS	3
19	H0058	1/4 INCH FLAT WASHER	1
20	S0019-1P	BRACKET	1
21	H0210	HOSE CLAMP	1
	HP0012-6KIT	DUMP HOSE & MOUNTING HARDWARE KIT TANK VAC	1
18	INC. IN HP0012-6KIT	NUT 1/4-20 NYLOCK SS	1
21	INC. IN HP0012-6KIT	HOSE CLAMP	1
22	INC. IN HP0012-6KIT	HOSE --- DRAIN HAWK /20 WDV	1
25	INC. IN HP0012-6KIT	SPACER 1/2 " L	3
26	INC. IN HP0012-6KIT	NUT 1/4-20 HEX SS	1
27	INC. IN HP0012-6KIT	EYE BOLT MODIFIED	1
23	SM50062-1	1/4 - 20 X 1.25 HEX CAP SCREW SS	1
	HP0012-10KIT	HANDLE & MOUNTING HARDWARE KIT TANK VAC	1
10	INC. IN HP0012-10KIT	1/4 MEDIUM SPLIT LOCK WASHER SS	2
18	INC. IN HP0012-10KIT	NUT 1/4-20 NYLOCK SS	4
23A	INC. IN HP0012-10KIT	1/4 - 20 X 1.5 HEX CAP SCREW	2
24	INC. IN HP0012-10KIT	HANDLE TANK VAC	1
28	INC. IN HP0012-10KIT	BOLT HEX 1/4-29 X 4.0 L ZINC	2
29	INC. IN HP0012-10KIT	SPACER	4
30	INC. IN HP0012-10KIT	WASHER FENDER 1.0	2
31	INC. IN HP0012-10KIT	WASHER RUBBER SEALING	2
32	WDH0001ASSY	DUST BAG ASSEMBLY (DRY PICK-UP)	1
	HP0012-11KIT	TOOL BASKET & MOUNTING KIT TANK VAC	1
11	INC. IN HP0012-11KIT	SCREW - STAINLESS STEEL - 1/4 - 20 X 3/4 HEX CAP	2
18	INC. IN HP0012-11KIT	NUT 1/4-20 NYLOCK SS	2
33	INC. IN HP0012-11KIT	MOUNTING BRACKETS (2 PCS) TOOL BASKET	1
34	INC. IN HP0012-11KIT	TOOL BASKET MODIFIED	1
35	L0042	HAWK LABEL W/ LOGO	1

FRONT MOUNT SQUEEGEE KIT

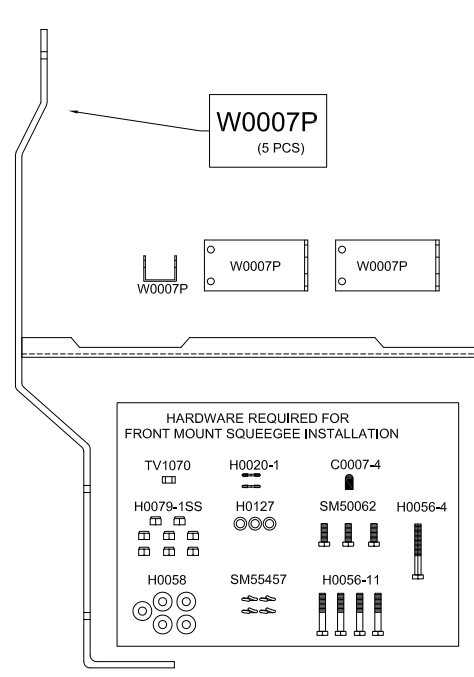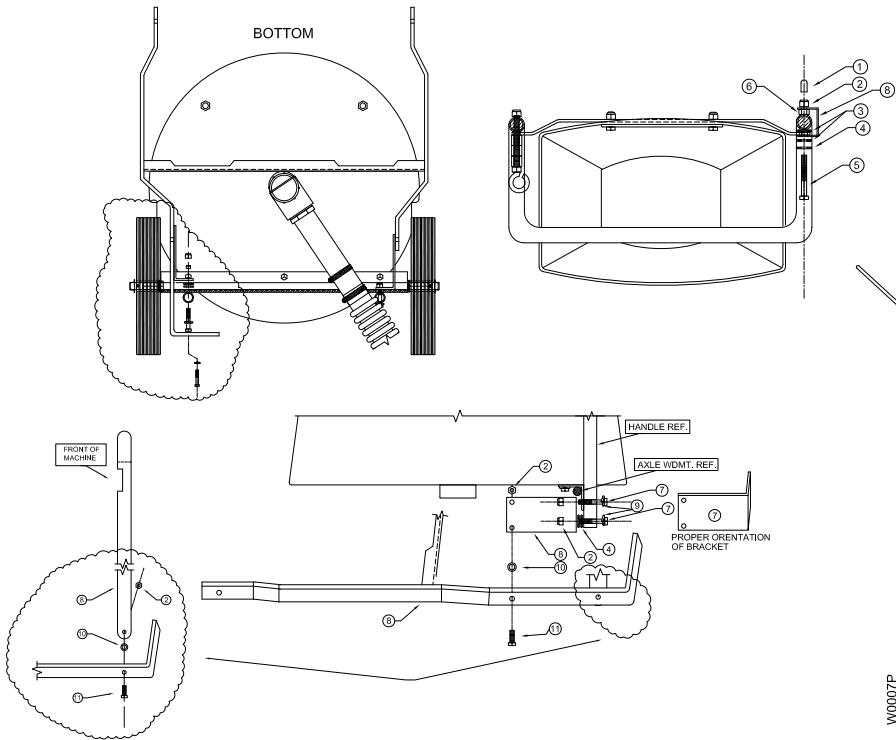

A0022-5

DETAIL NO:	PART NUMBER	DESCRIPTION	QTY.
1		SCREW RND PH MS 5/16-18X2	2
2		WASHER FLAT - NYL .318 X .510	4
3		WHEELS - 3 INCH FOR FMS	2
4		NUT HEX 1/8M 5/16 - 18 SS	2
5		NUT 5/16 - 18 SS NYLOC	2
6		SQUEEGEE BLADE NOTCHED	2
7		SQUEEGEE BLADE STR	2
8		REINFORCING STRIP SQUEEGEE STAINLESS	4
9		SCREW 10 - 24 X 3/4 MACH SCR STAINLESS	22
10		WASHER # 10 - STAINLESS	4
11		NUT - NYLOC - SS 10 - 24 STAINLESS	22
12		SQUEEGEE BODY WDMT, BLK WVL	1
13		SCREW 1/4 - 20 X 1 INCH 305 HEX	2
14		NUT NYLOC 1/4-20 STAINLESS	2

DETAIL NO:	PART NUMBER	DESCRIPTION
1		CAP VINYL SCREW COVER
2		NUT NYLOC 1//4-20 SS
3		WASHER LOCK 1/4 INTER./EXT.
4		WASHER FLAT 1/4 INCH
5		BOLT HEX CAP 1/4-20 X 2.0 L ZN
6		SPACER 1/4 INCH
7		BOLT HEX CAP 1/4-20 X 1.5 L ZN
8		FRONT MT. SQUEEGEE WDMT. (5 PCS)
9		WASHER LOCK 1/4 INCH SPLIT RING SS
10		WASHER FLAT NYLON .318 X .510
11		BOLT 1/4-20 X 3/4 HEX CAP SS
12		FRONT MOUNT SQUEEGEE ASSEMBLY COMP.

LIMITED WARRANTY

Your HAWK equipment which has been manufactured, tested and inspected in accordance with carefully specified engineering requirements, is warranted to be free from defects in material and workmanship. This Limited Warranty is, however, subject to the Following qualifications, conditions and limitations which are set forth to provide you and all users of the HAWK equipment with information concerning the duration, extent, availability, and applicability of this HAWK Limited Warranty, the procedure to be taken to obtain its performance, and other information concerning the **HAWK Limited Warranty policy**.

The HAWK ENTERPRISES Limited Warranty is extended to the original end user as follows:

Machines: 1 year parts replacement and 1 year service labor warranty.

Replacement parts guaranteed for 90 days from date of installation against defects in material and workmanship.

This Limited Warranty will not cover damage attributable to the following:

- (1) Improper, unreasonable or negligent use or abuse of the equipment
- (2) Abrasions or punctures of the equipment.

The start date of the Limited Warranty coverage shall be the purchase date of the original end user or six months from the date the machine was shipped from the Factory, whichever comes first.

PARTS OF EQUIPMENT NOT COVERED BY THE LIMITED WARRANTY

Certain parts of equipment require replacement in the ordinary use due to normal wear by reason of their characteristics. Normal wear items such as cords, switches, bumpers, bearings, etc. are excluded from the Limited Warranty.

EXCEPTIONS AND EXCLUSIONS FROM THE LIMITED WARRANTY

This equipment is required to be used on electric current as indicated on the data plate. Otherwise damage, defects, malfunctions or other failure of the equipment arising from use on electric current not as indicated are excepted and excluded from this Limited Warranty. Defects, malfunctions, failure or damage of the equipment caused by improper, unreasonable or neglect use or abuse while in possession of the purchaser are likewise excluded from this warranty. If repair is done on your equipment by anyone other than those designated as authorized to perform such work without first having obtained factory instructions, HAWK ENTERPRISES at its sole option, may determine that this warranty will not apply and that reimbursement for such repair will not be made because of the failure to comply with such factory specified instructions.

PROCEDURE TO BE TAKEN TO OBTAIN PERFORMANCE OF LIMITED WARRANTY REPAIR

To secure repair of the equipment or any warranted parts under this Limited Warranty, the following procedure should be taken. The inoperative equipment or warranted parts, together with satisfactory evidence of the purchase date, must be delivered, with shipping and delivery charges prepaid, to one of the following:

- (1) The dealer from whom purchased;
- (2) Any HAWK distributor's service department in the United States;
- (3) Any HAWK authorized service station in the United States.

If you are unable to locate any of the foregoing, you may write or otherwise communicate with HAWK ENTERPRISES before repair service is performed by anyone else. In such event, HAWK ENTERPRISES will provide either the location or a closely available HAWK distributor service department, or HAWK authorized service station or other factory instructions. Upon compliance with the above procedure, all warranted defects will be repaired, at no additional charge or costs to the customer, and the repaired product returned to the customer, with all shipping and delivery charges pre-paid. In following the procedures set forth, PLEASE MAKE CERTAIN to state the model, type and serial number as shown on the data plate of the equipment.

REPLACEMENT

In the event of a defect, malfunction or failure of your HAWK equipment or any warranted part to conform with this warranty, HAWK may, at its sole option and own expense, replace the equipment or any warranted part with another new, identical or reasonably equivalent model or part in lieu or repairing the defect.

NO REFUND OF PURCHASE PRICE

HAWK will not, as a matter of its Limited Warranty policy, refund the customer's purchase price.

LIMITED WARRANTY REGISTRATION CARD FOR YOUR EQUIPMENT AND REQUEST FOR INFORMATION

Your HAWK distributor from whom you purchased your equipment is responsible for the registration of your Limited Warranty with the factory. Any information or questions you may have concerning your HAWK ENTERPRISES equipment or this Limited Warranty may likewise be secured from the factory. This Limited Warranty will give you specific legal rights, and you may also have other rights which vary from state to state.